

Serialnumber Dodge Ram.

- Start the car, and wait till the navigation unit has booted.
- Press for 5 seconds on heater UP , heater Down and Front defrost (all at the same time)



- Select SYSTEM INFORMATION
- Select RADIO PART INFORMATION
- Serialnumber is now shown on screen. Always starts with T00BE